




ELEVATION VIEW P1-P4      SCALE 1/2" = 1'

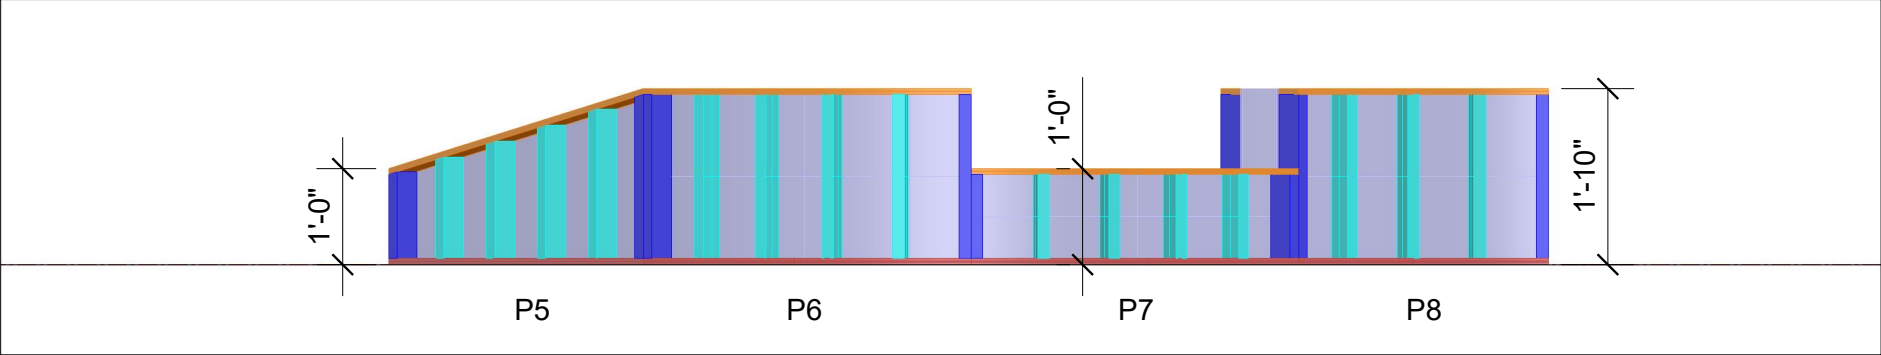


ELEVATION VIEW P5-P8      SCALE 1/2" = 1'

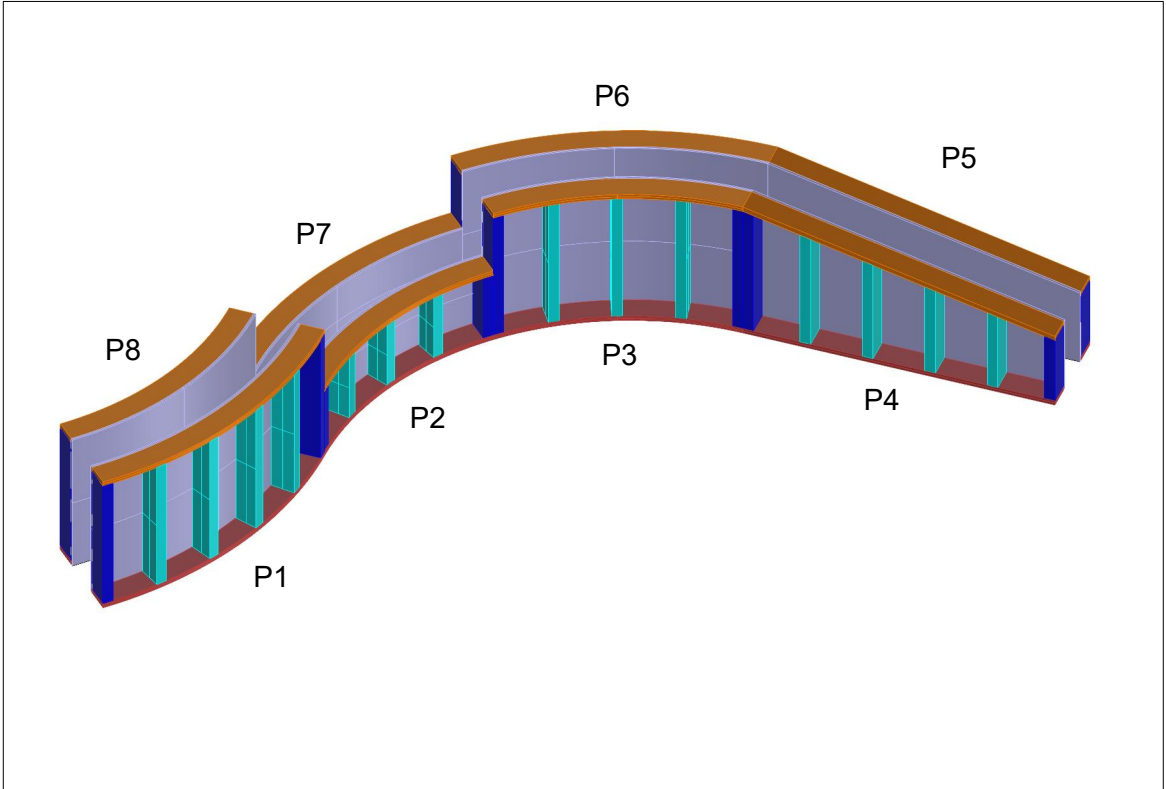


PANEL LAYOUT

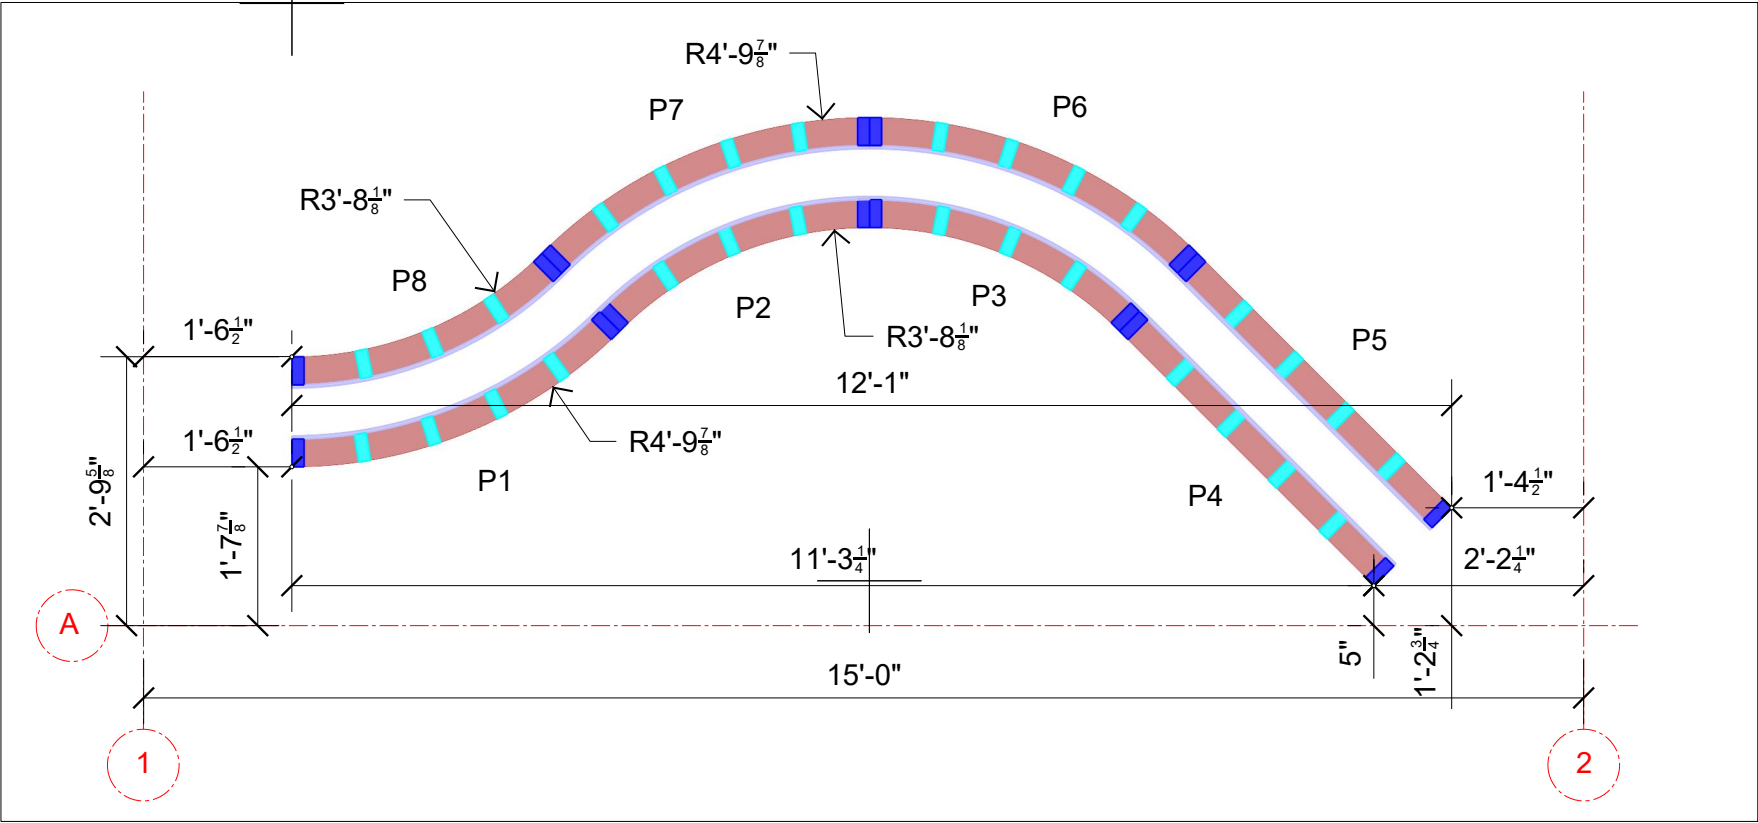


FORMWORK LAYOUT PLAN      SCALE 1/2" = 1'

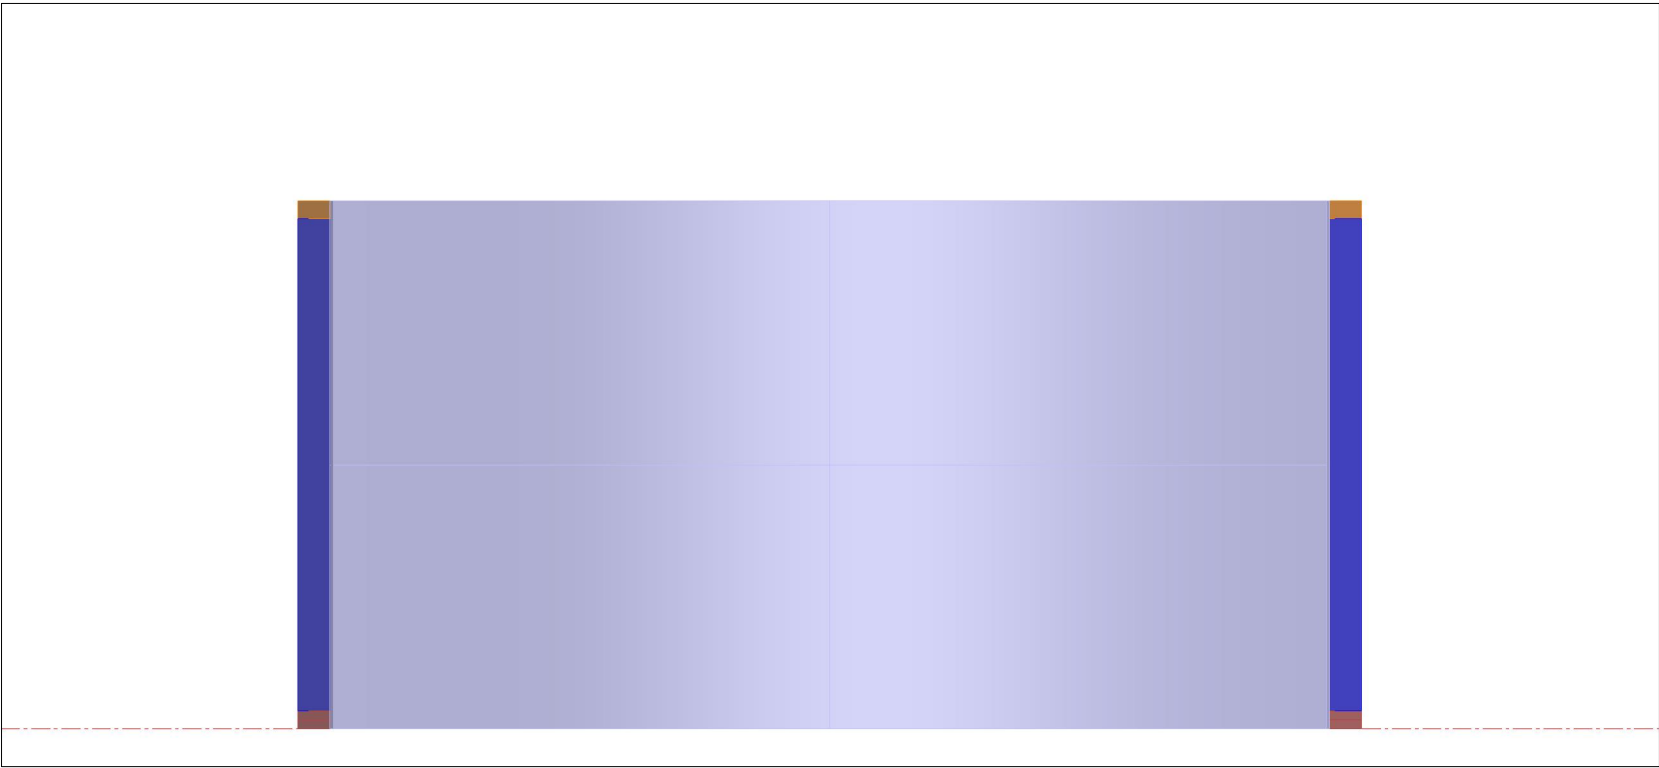


PANEL 1 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

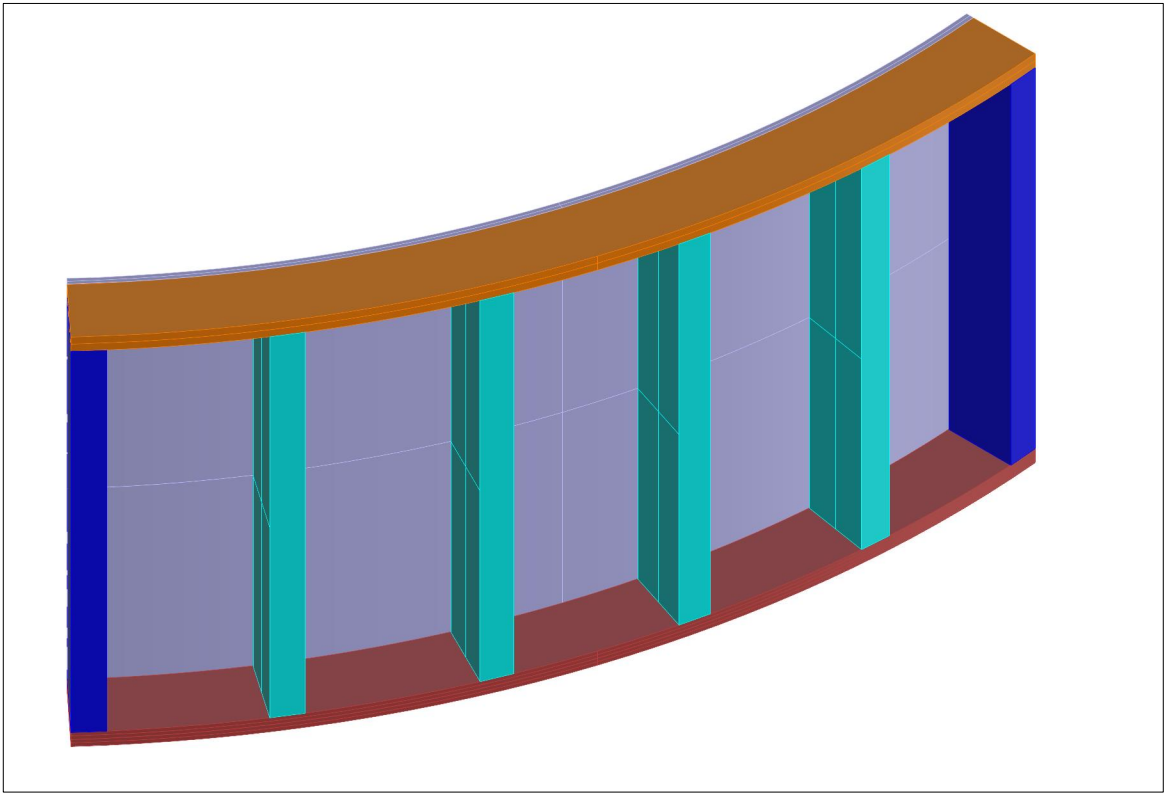

PANEL 1 LAYOUT

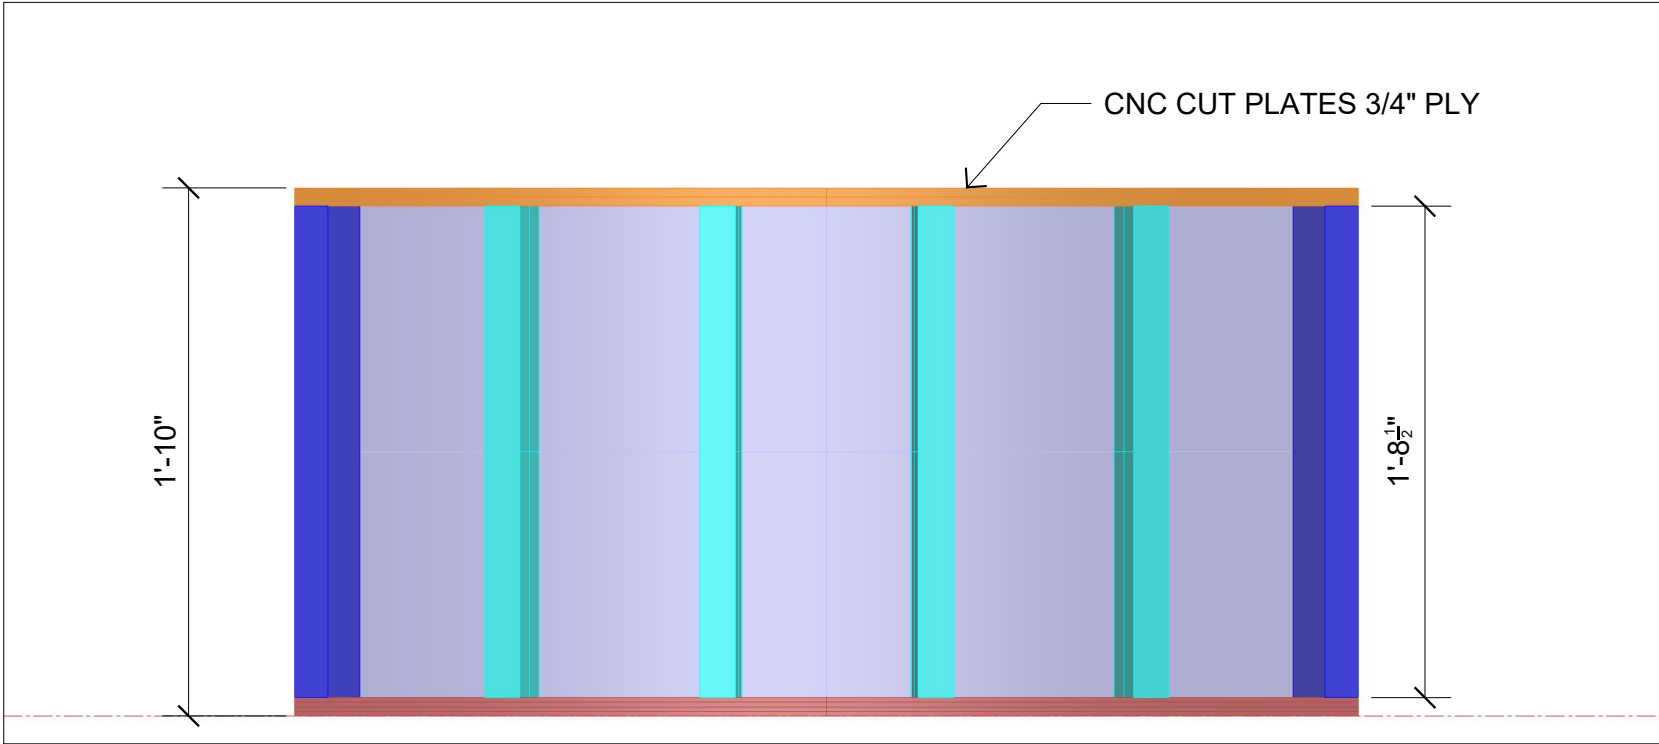


PANEL 1 FRAMING ELEVATION      SCALE 1-1/2" = 1'

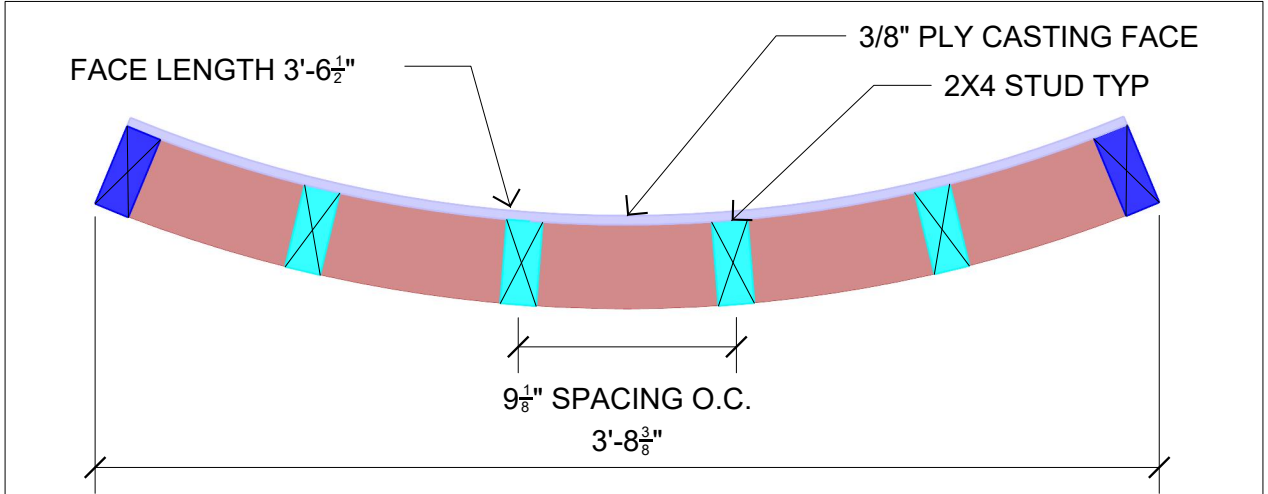


PANEL 1 PLAN      SCALE 1-1/2" = 1'

GENERAL NOTES


1. ATTACH STUDS TO PLATES USING 2 FASTENERS
2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.

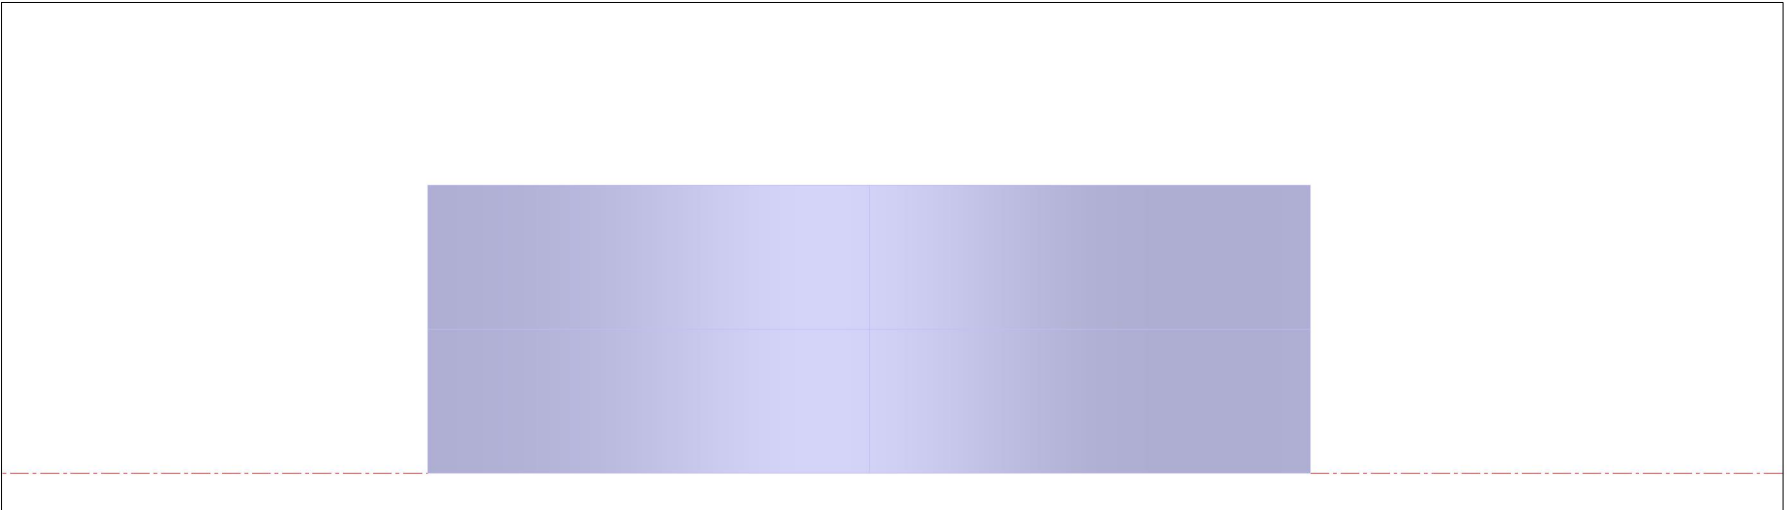


PANEL 2 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

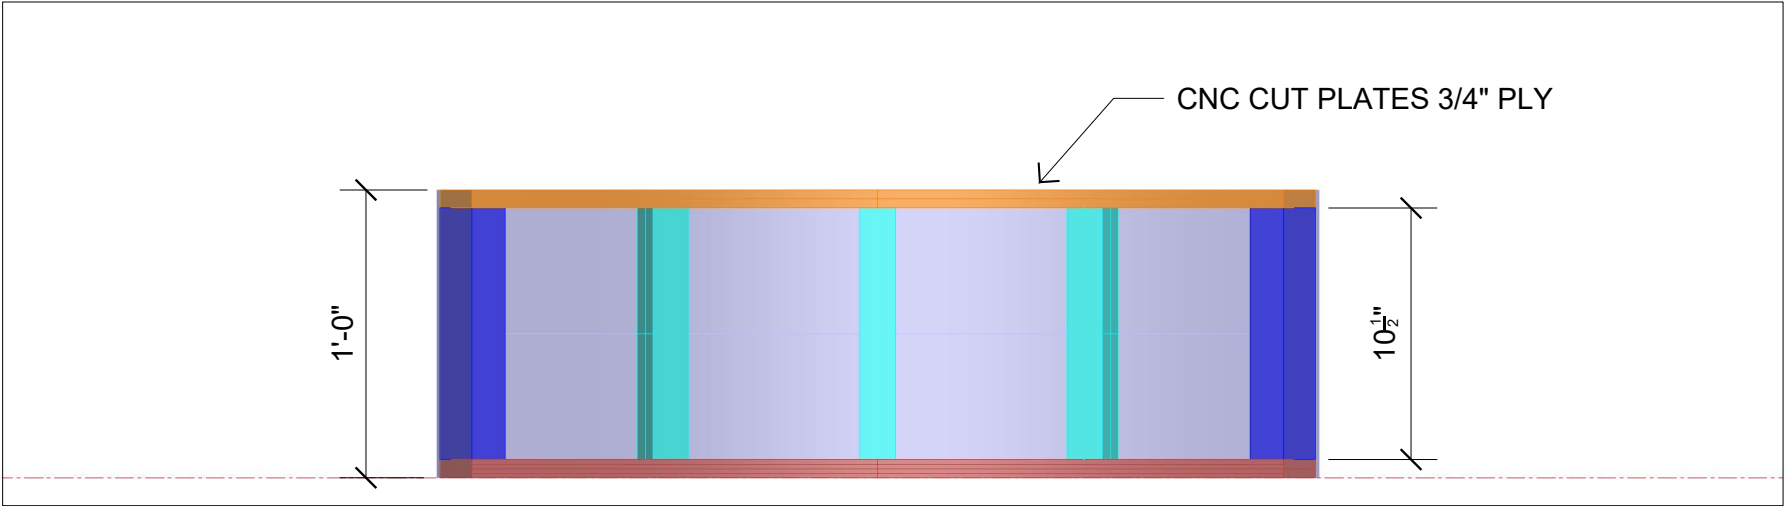

PANEL 2 FRAMING ELEVATION      SCALE 1-1/2" = 1'

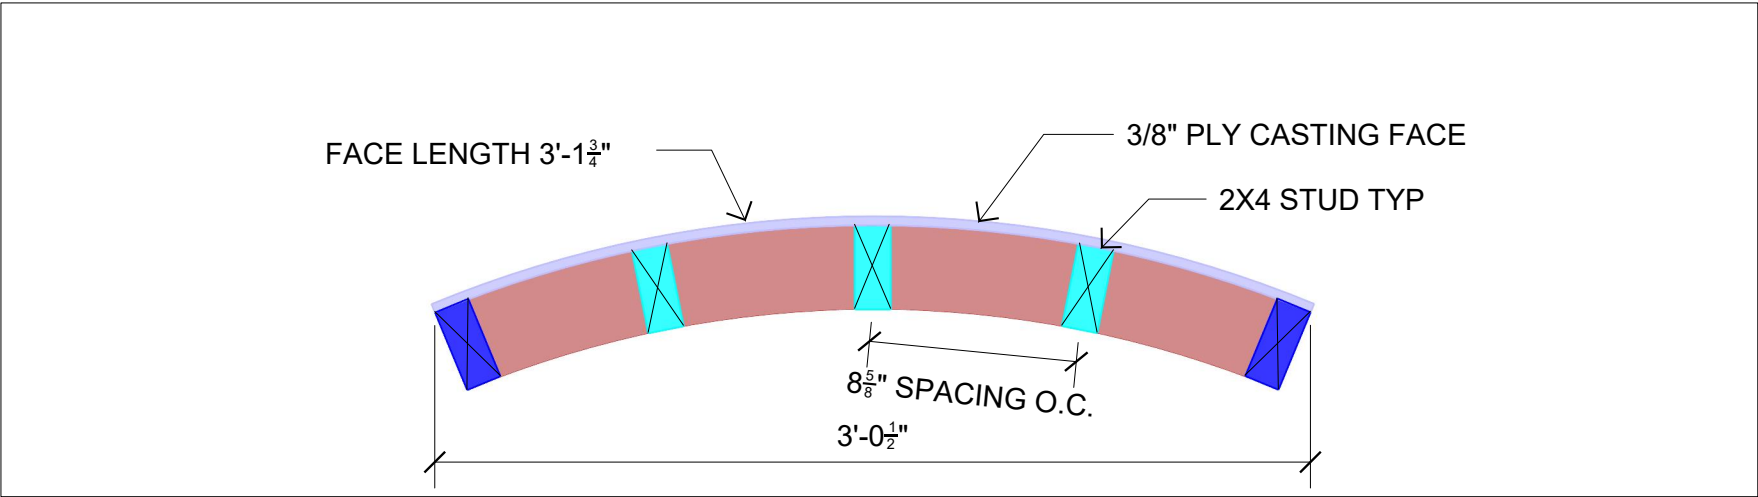


PANEL 2 PLAN      SCALE 1-1/2" = 1'

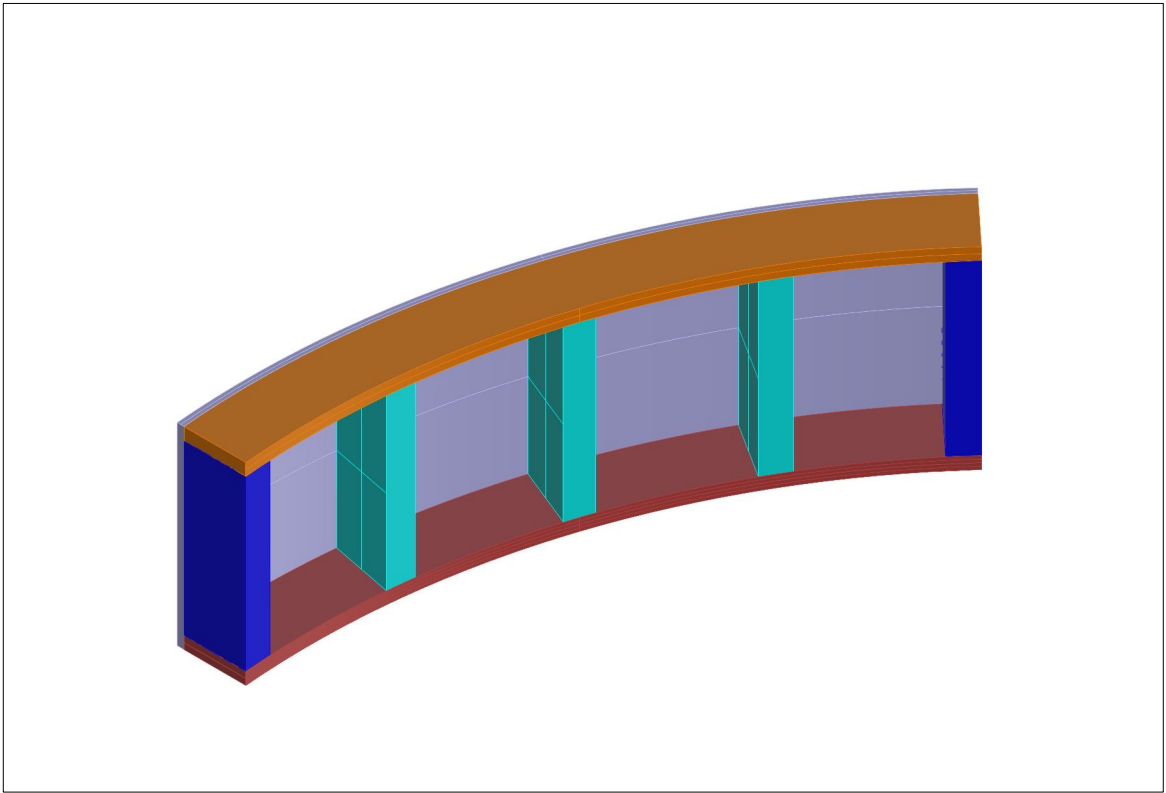


PANEL 2 LAYOUT

GENERAL NOTES


- 1. ATTACH STUDS TO PLATES USING 2 FASTENERS
- 2. ATTACH CASTING FACE TO FRAMING UTILIZING TWO SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD AND ONE IN THE LOWER.

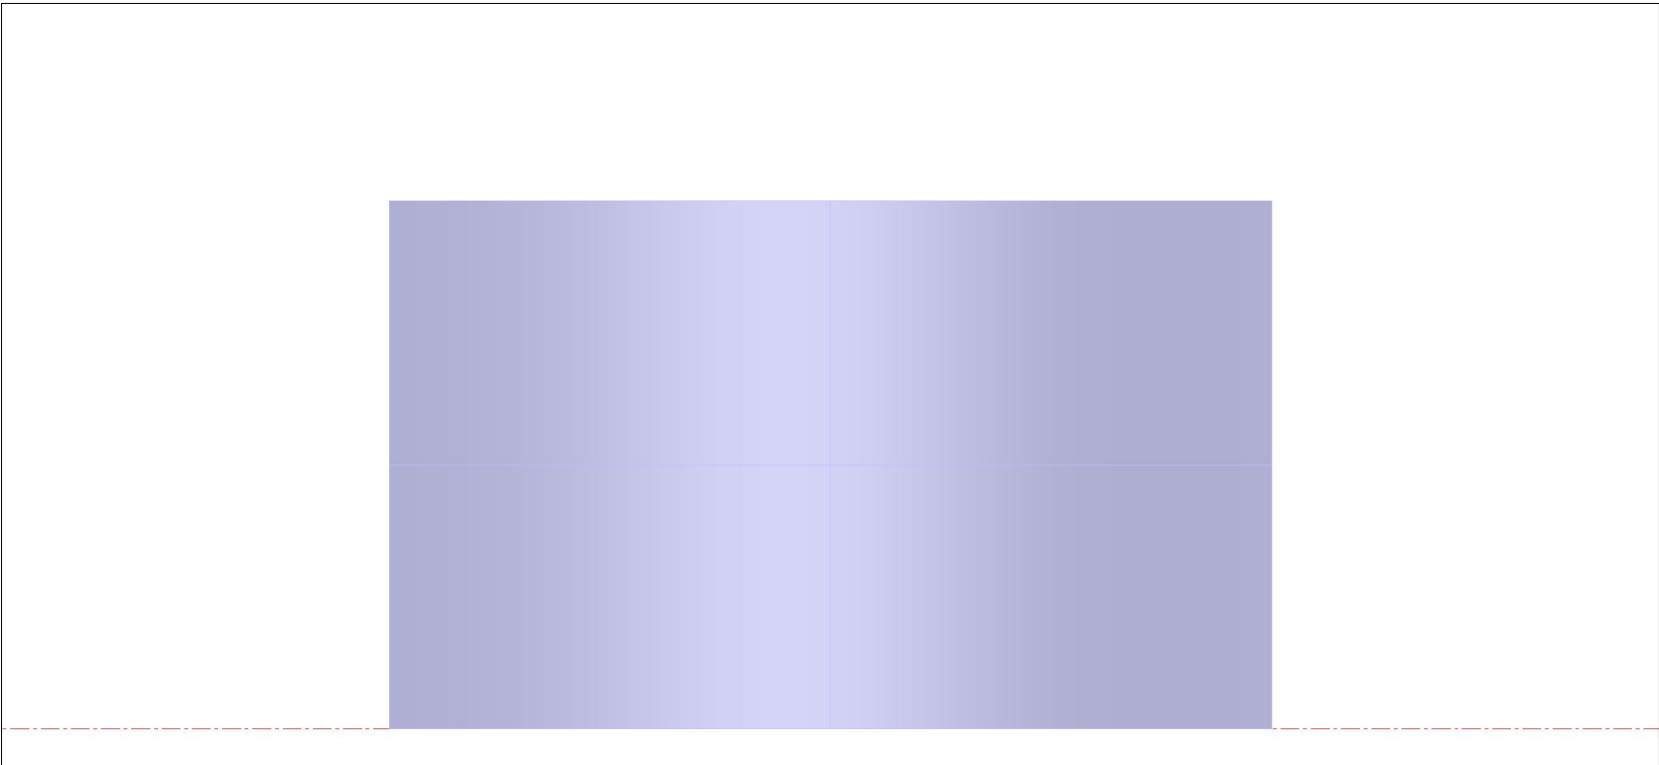


PANEL 3 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

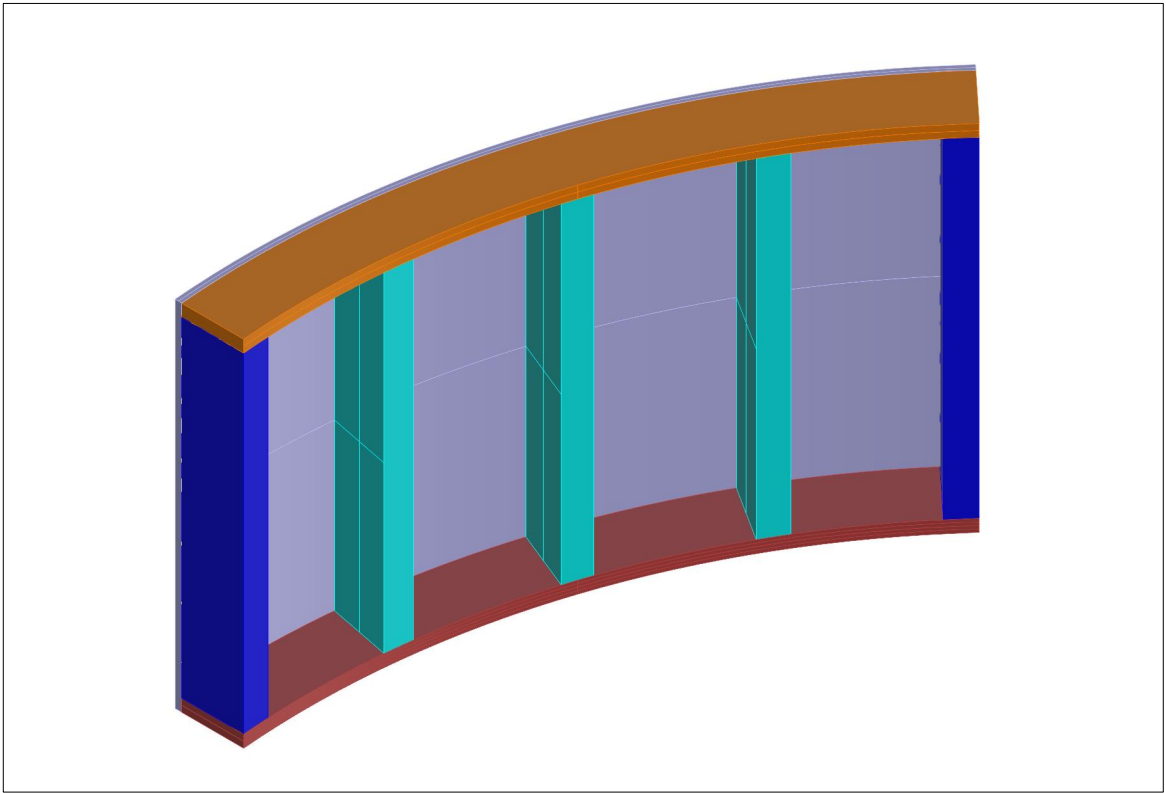

PANEL 3 LAYOUT

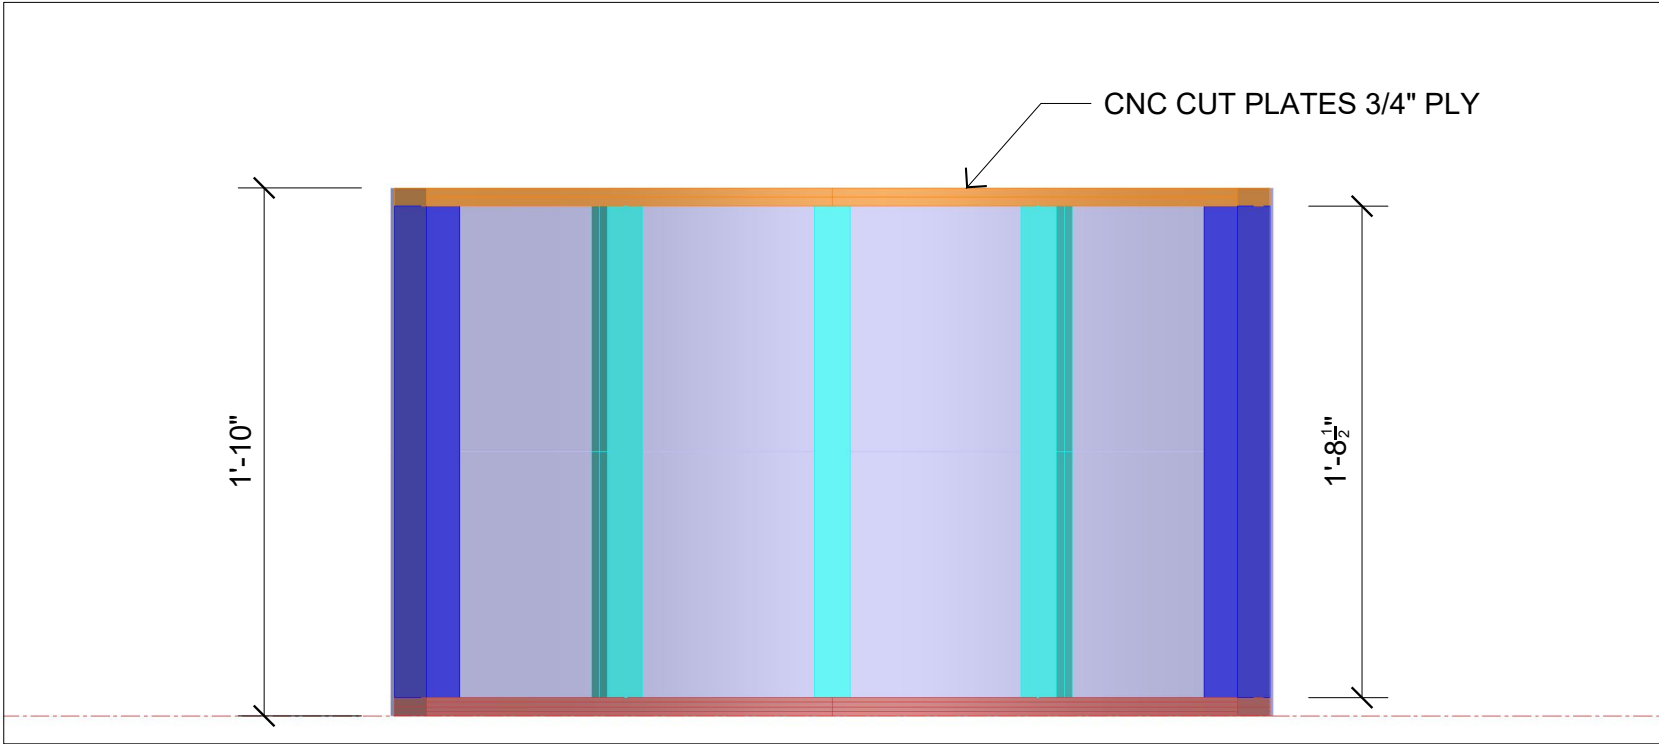

PANEL 3 FRAMING ELEVATION      SCALE 1-1/2" = 1'

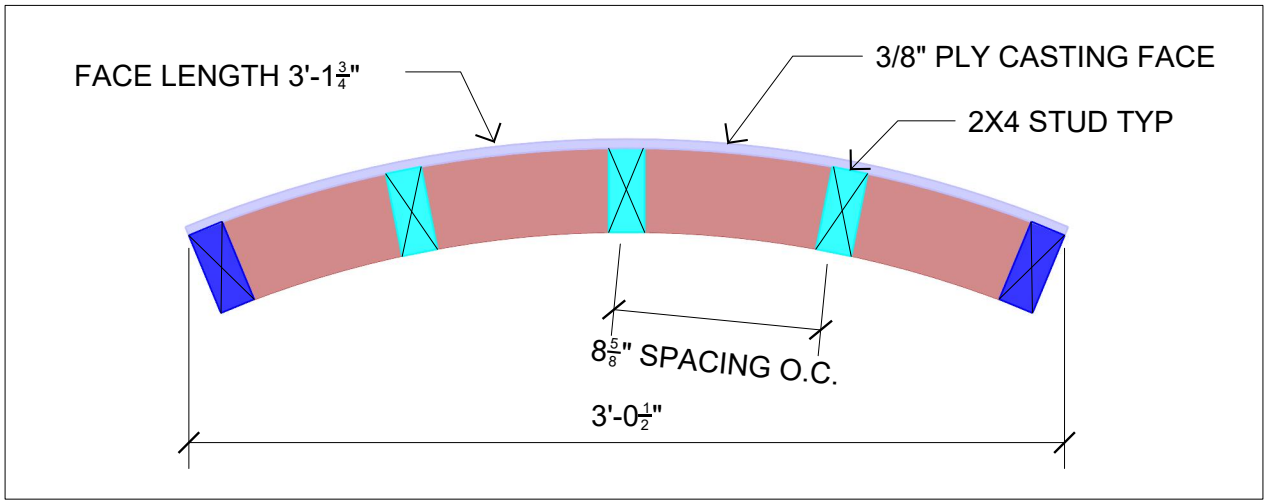


PANEL 3 PLAN      SCALE 1-1/2" = 1'

GENERAL NOTES


1. ATTACH STUDS TO PLATES USING 2 FASTENERS
2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.




PANEL 4 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

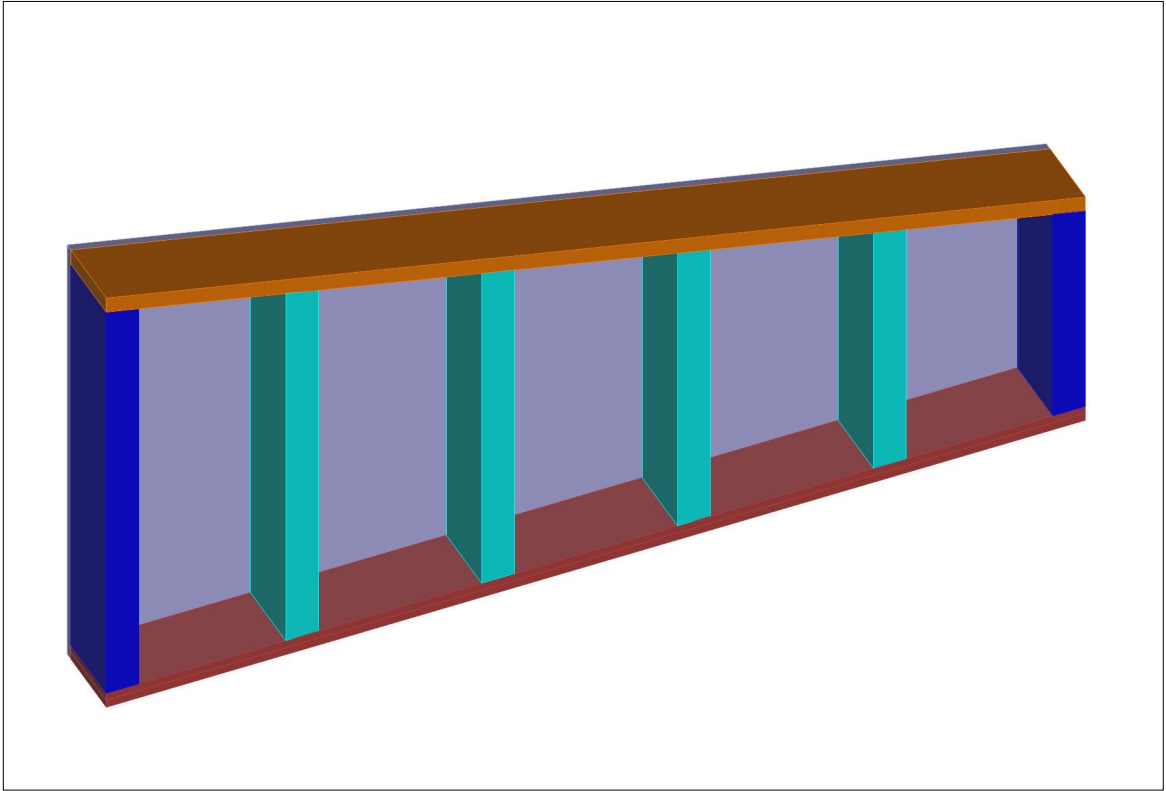

PANEL 4 LAYOUT

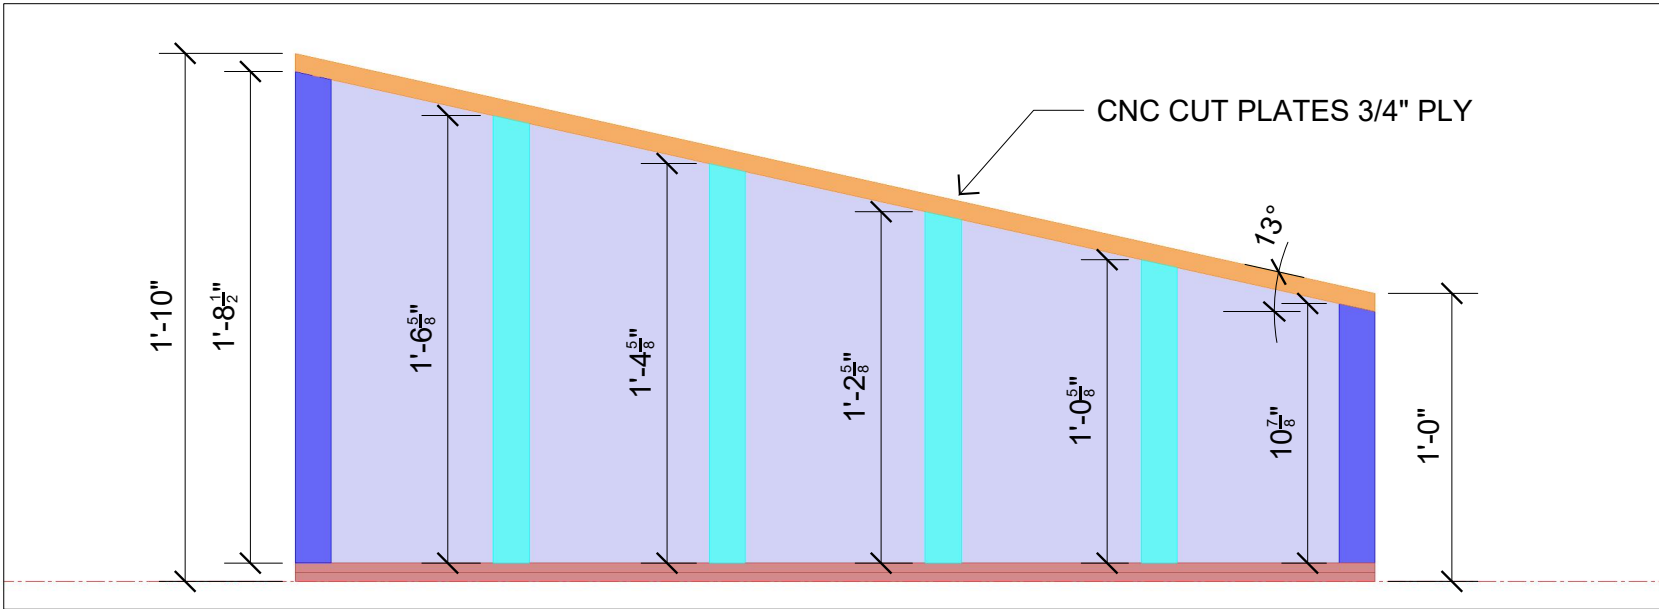


PANEL 4 FRAMING ELEVATION      SCALE 1-1/2" = 1'

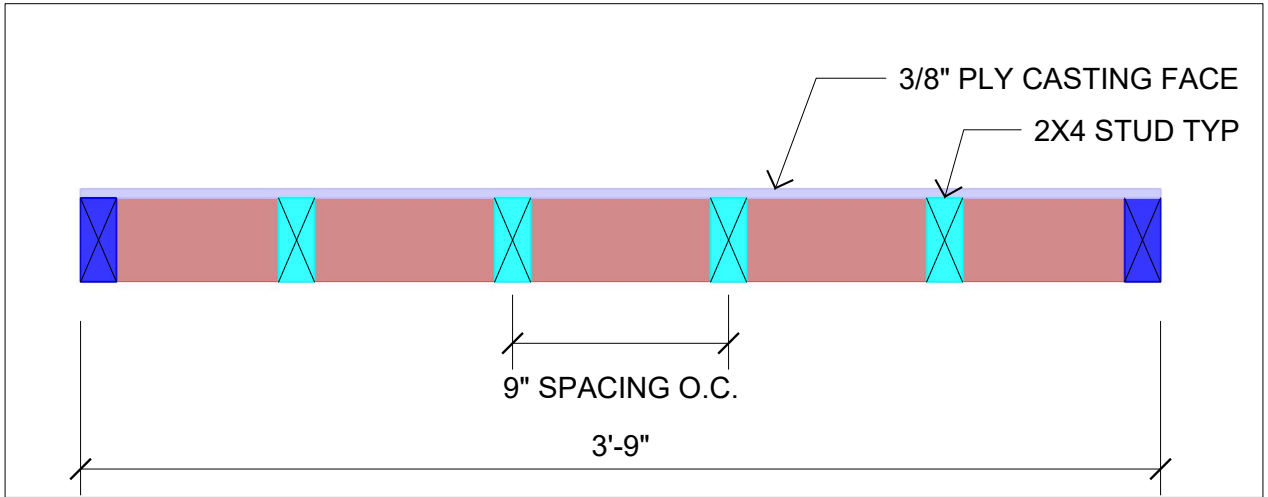


PANEL 4 PLAN      SCALE 1-1/2" = 1'

GENERAL NOTES


- 1. ATTACH STUDS TO PLATES USING 2 FASTENERS
- 2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.

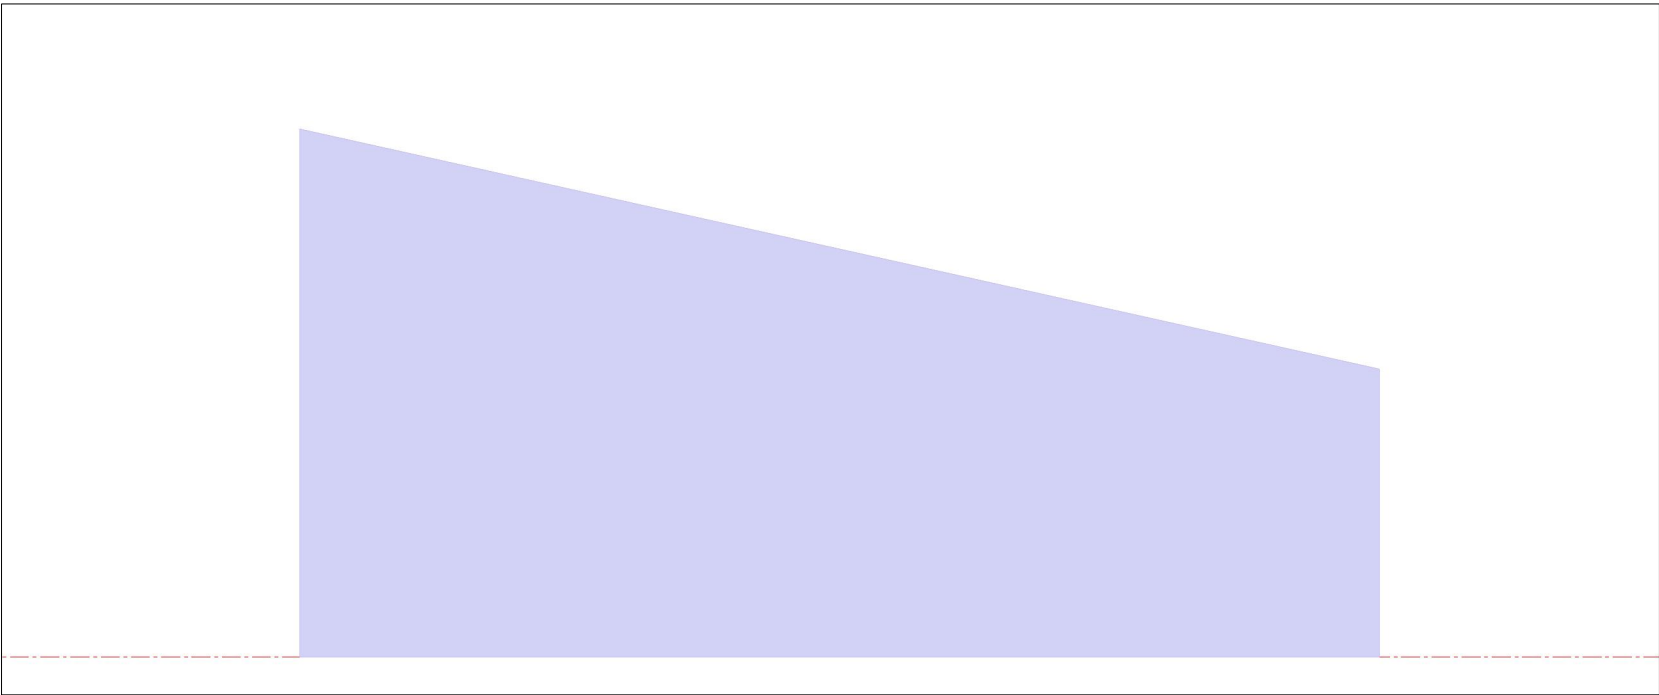


PANEL 5 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

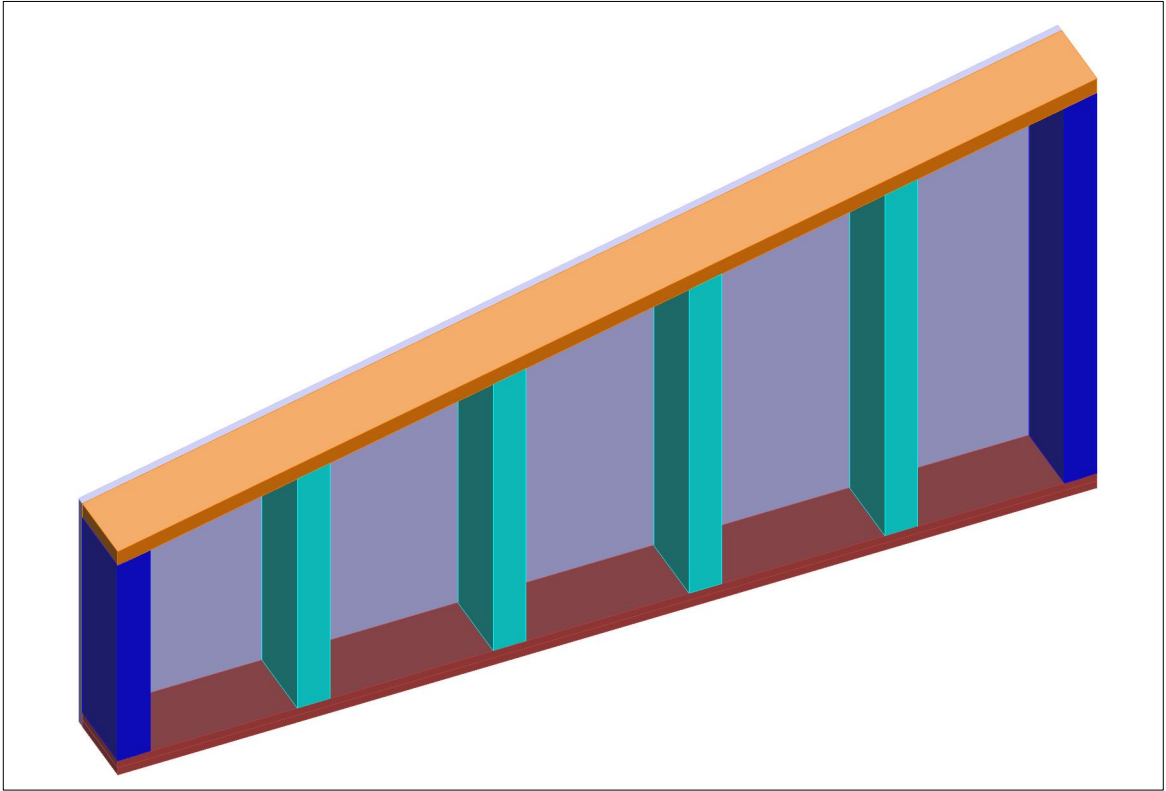

PANEL 5 LAYOUT

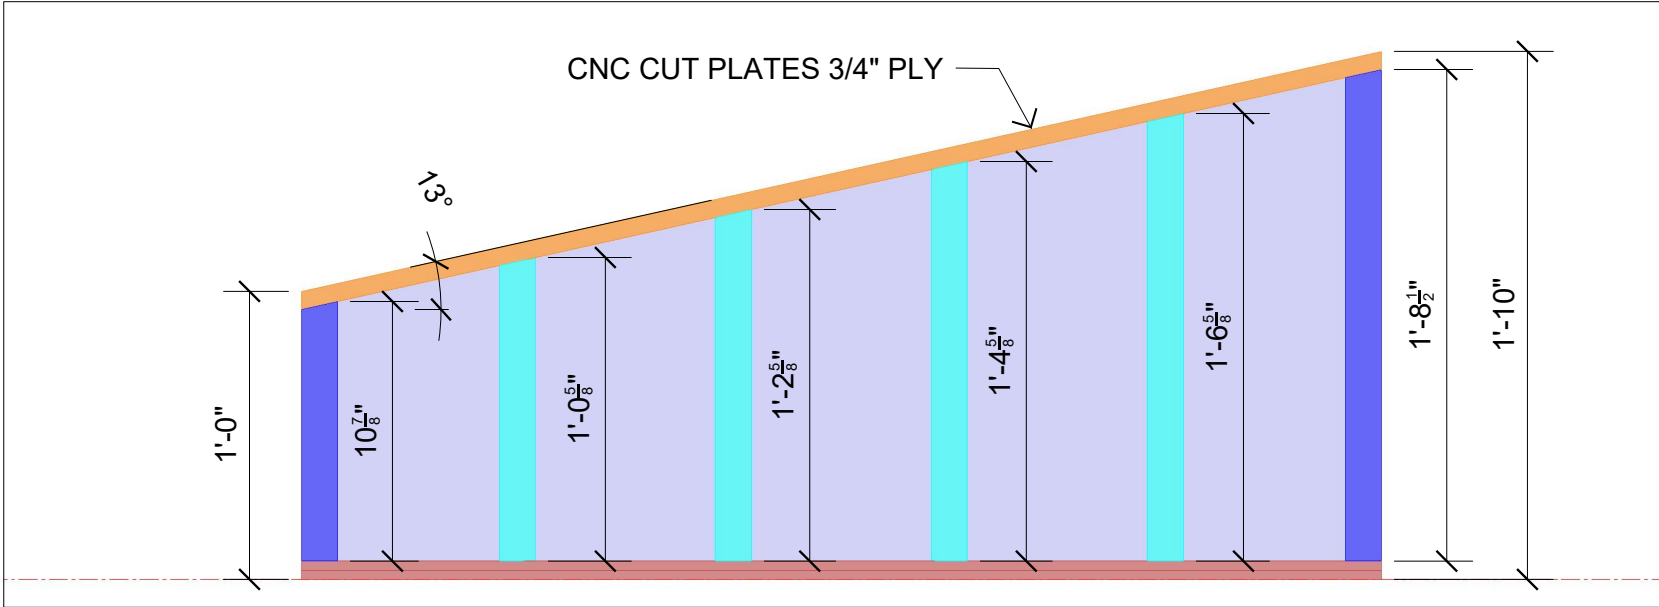

PANEL 5 FRAMING ELEVATION      SCALE 1-1/2" = 1'

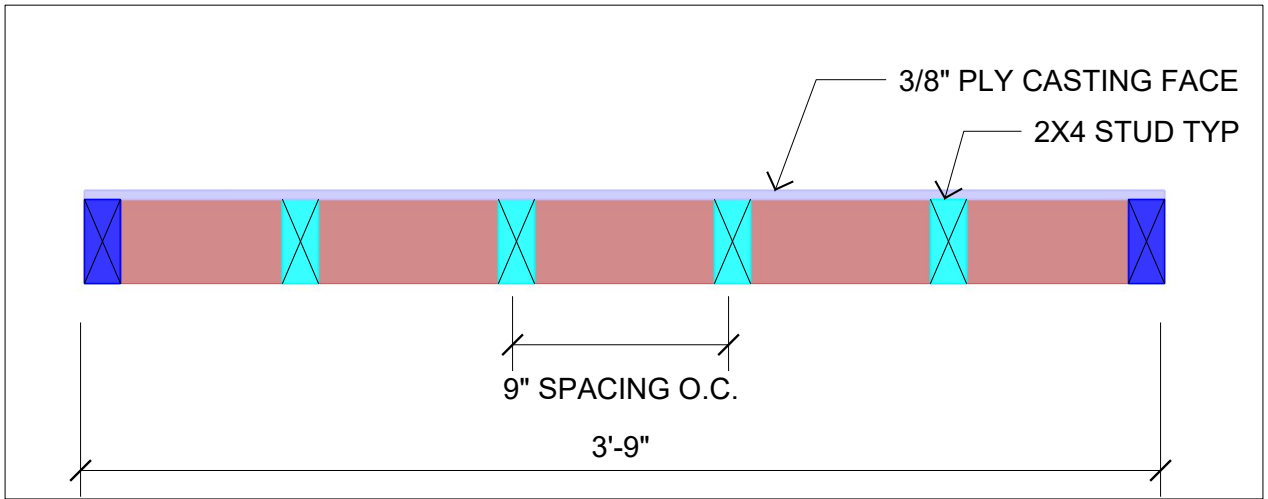


PANEL 5 PLAN      SCALE 1-1/2" = 1'


GENERAL NOTES

1. ATTACH STUDS TO PLATES USING 2 FASTENERS
2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.




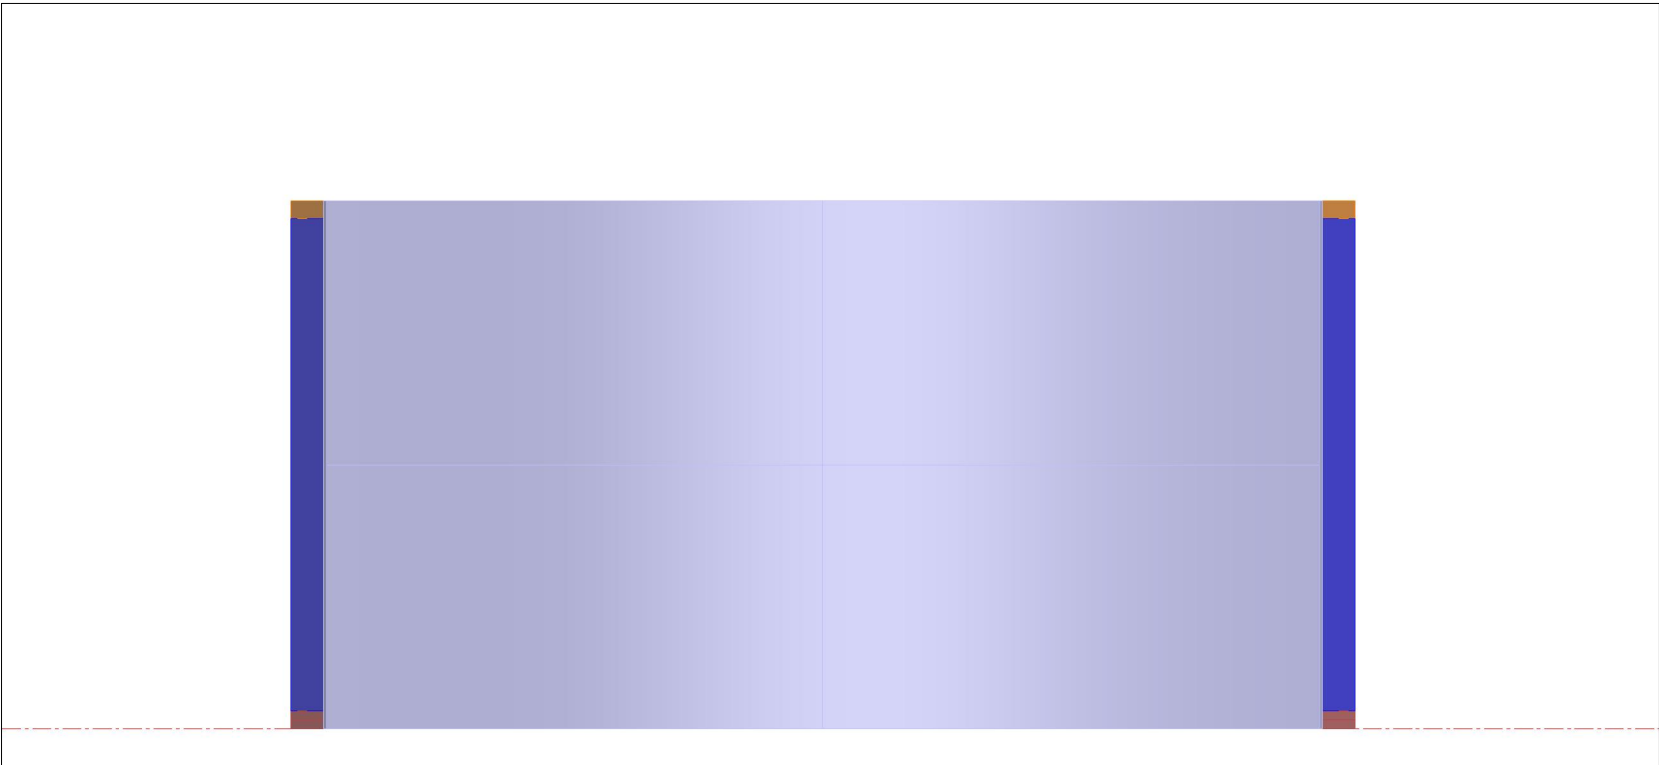


PANEL 6 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

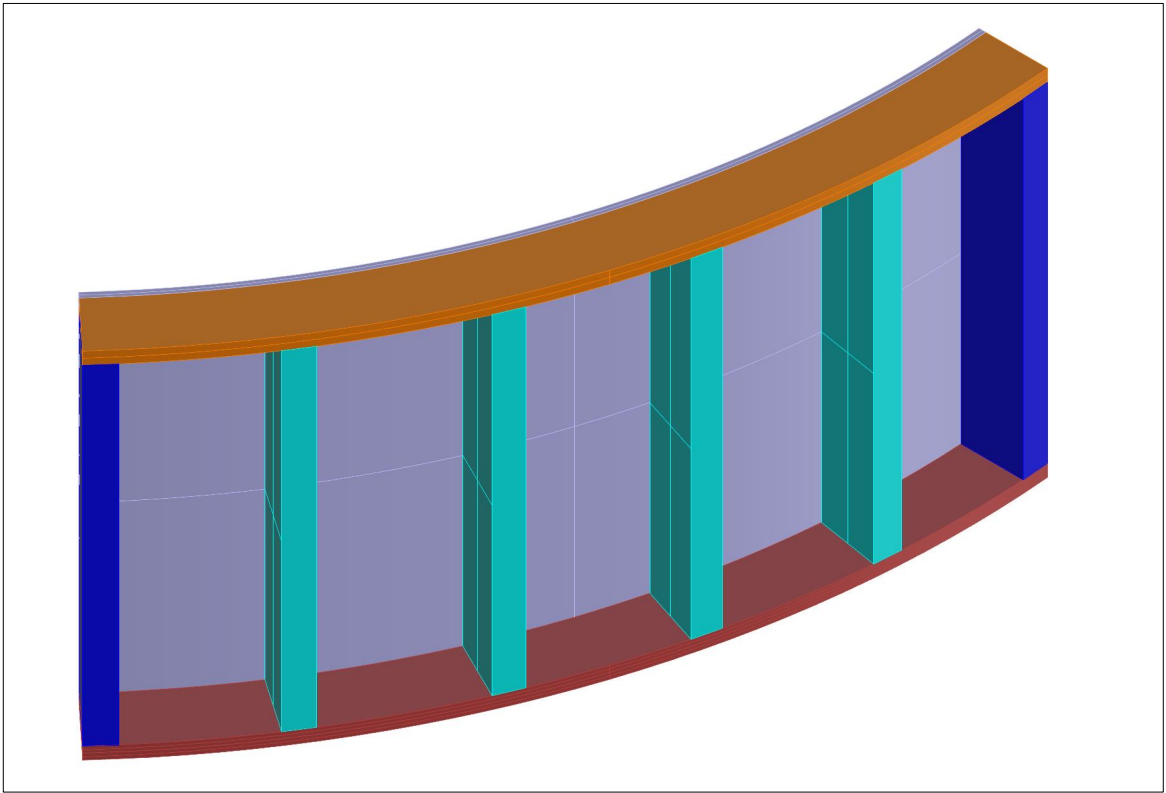

PANEL 6 LAYOUT

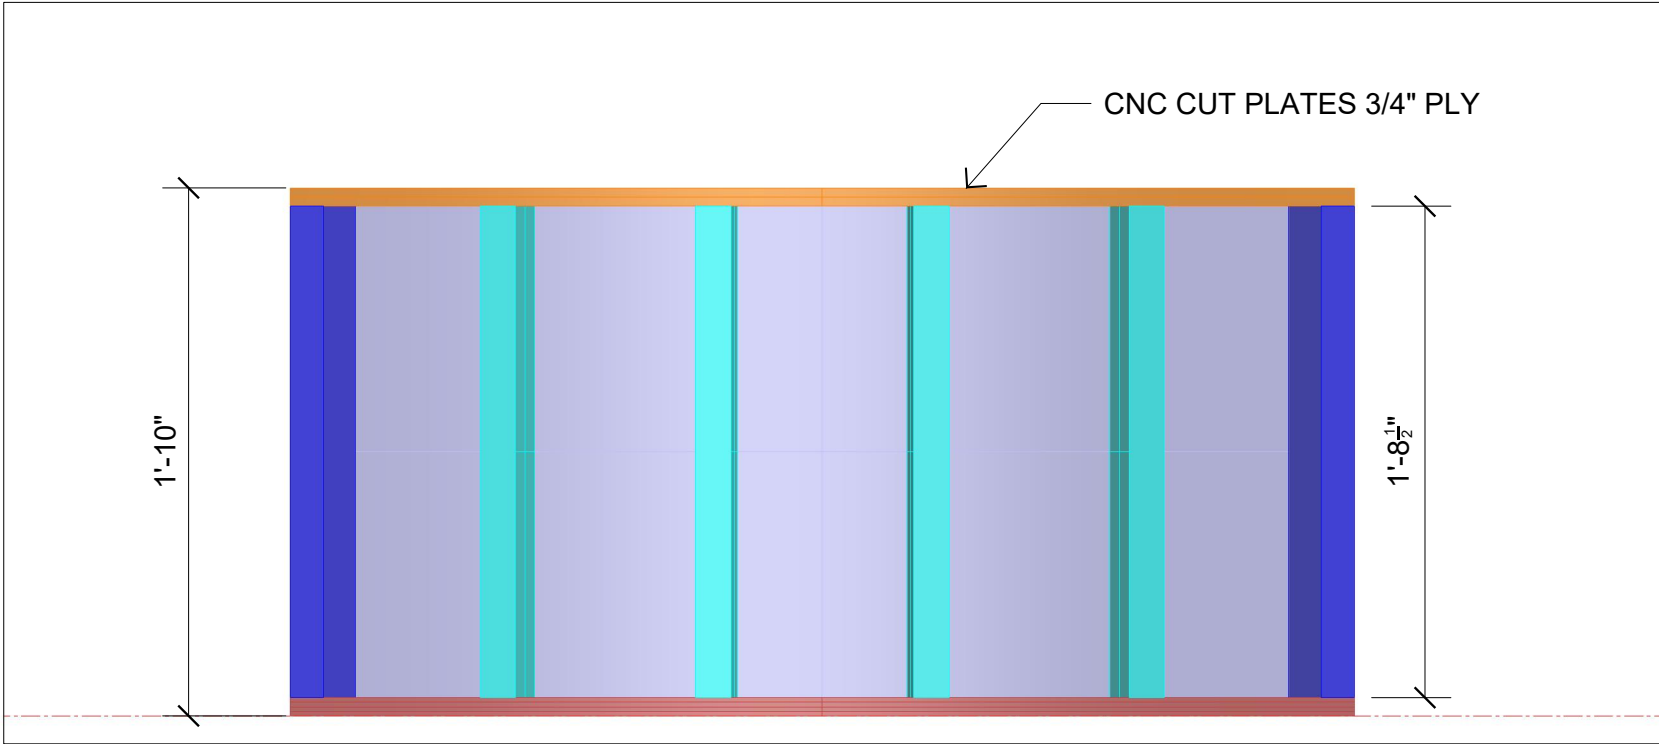


PANEL 6 FRAMING ELEVATION      SCALE 1-1/2" = 1'

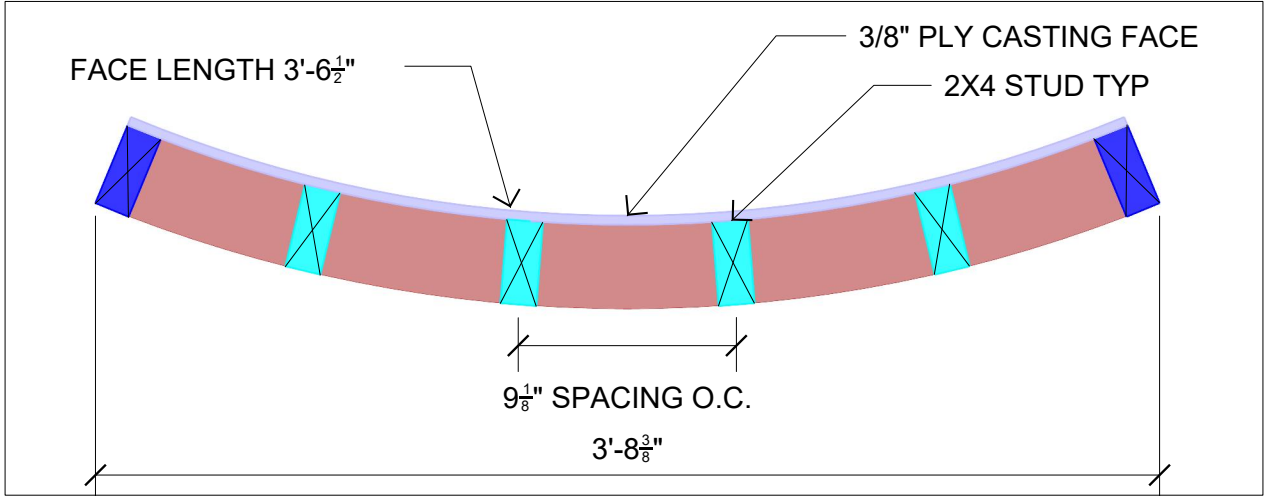


PANEL 6 PLAN      SCALE 1-1/2" = 1'

GENERAL NOTES


1. ATTACH STUDS TO PLATES USING 2 FASTENERS
2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.

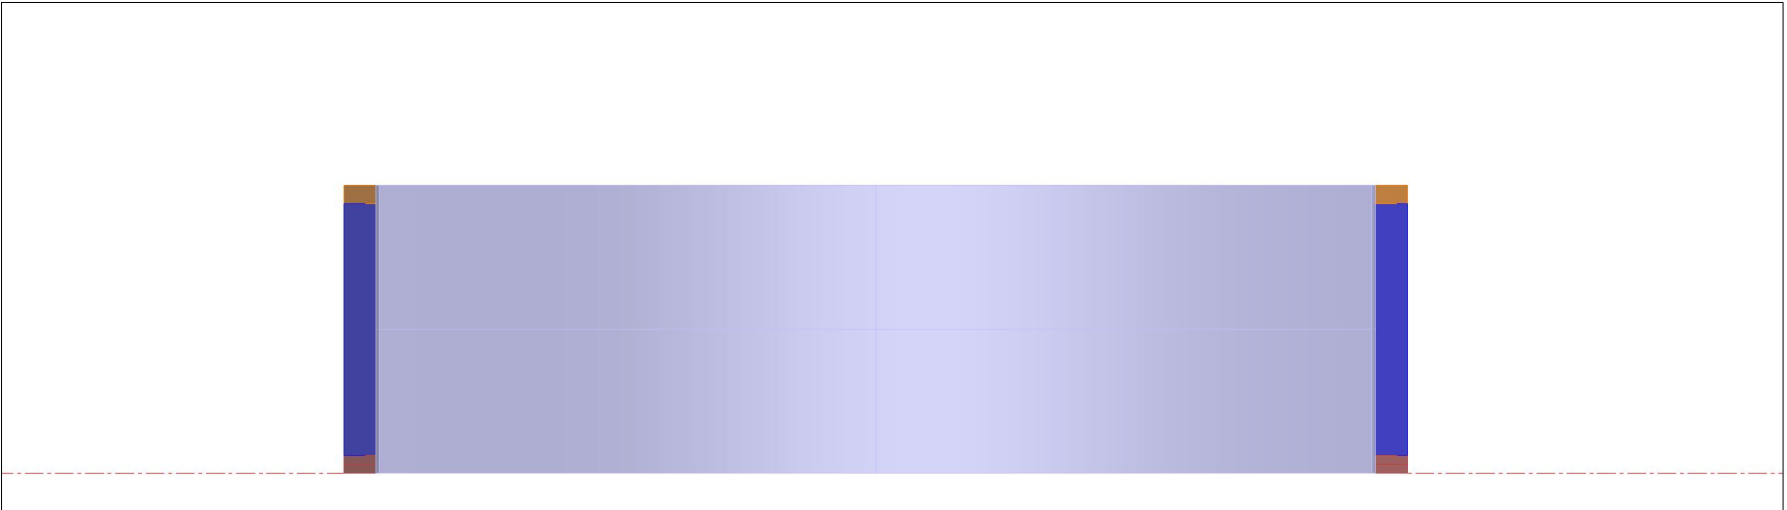


PANEL 7 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

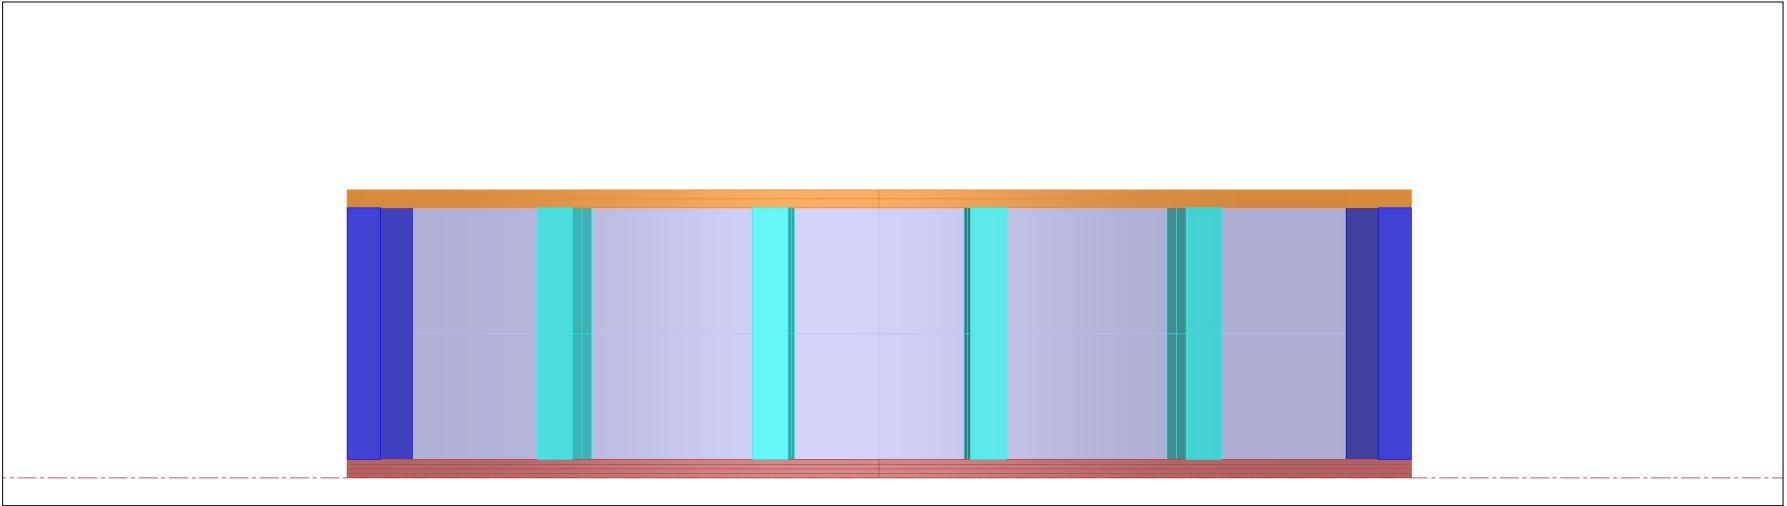

PANEL 7 FRAMING ELEVATION      SCALE 1-1/2" = 1'

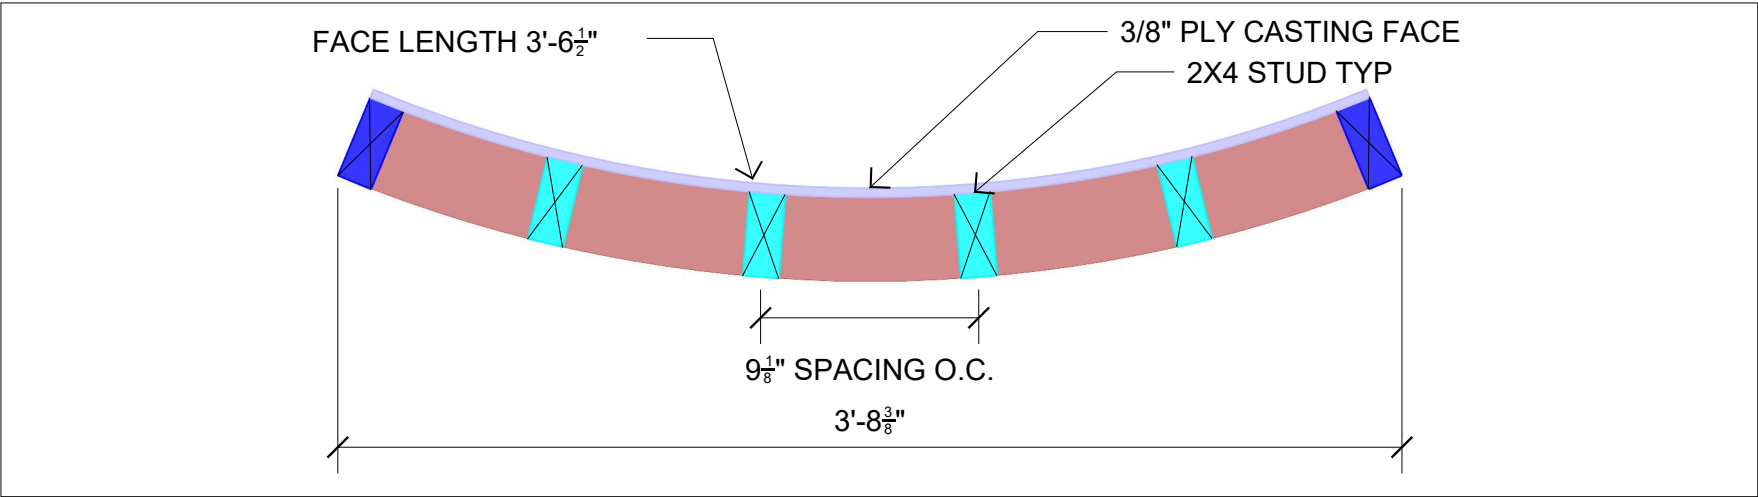

PANEL 7 PLAN      SCALE 1-1/2" = 1'

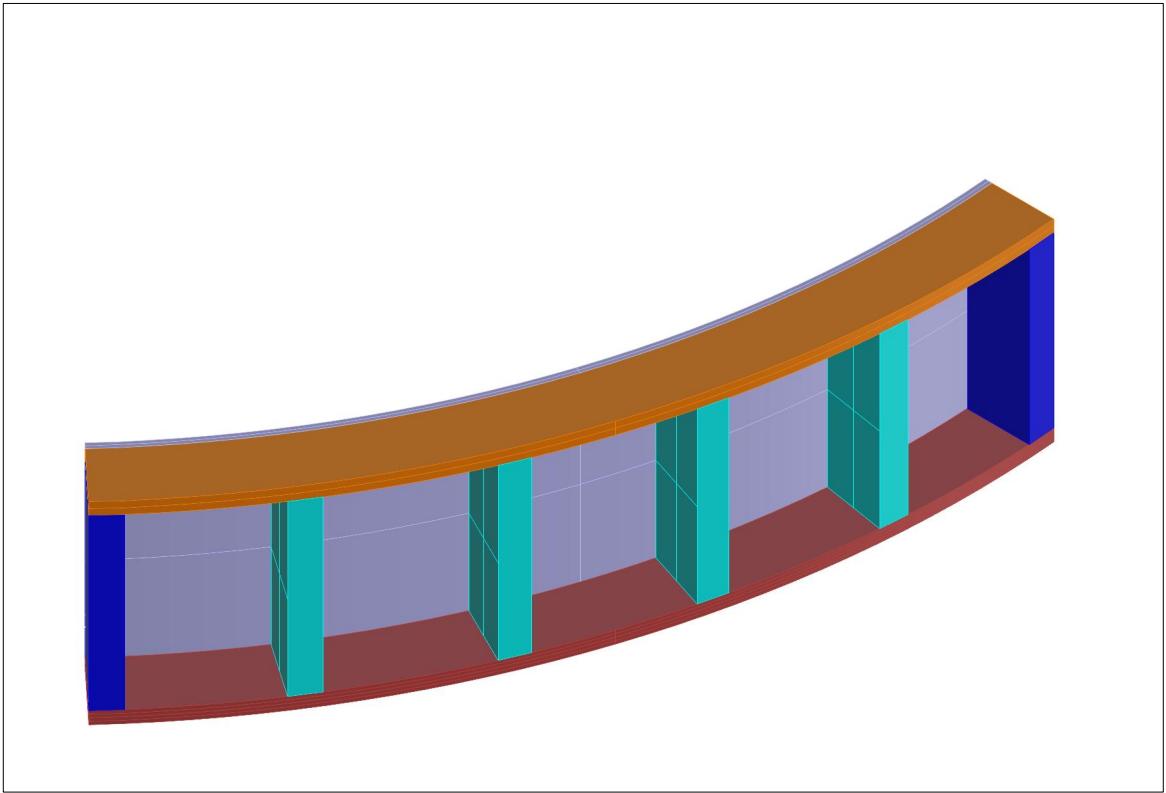

PANEL 7 LAYOUT


GENERAL NOTES

- 1. ATTACH STUDS TO PLATES USING 2 FASTENERS
- 2. ATTACH CASTING FACE TO FRAMING UTILIZING TWO SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD AND ONE IN THE LOWER.







PANEL 8 CASTING FACE ELEVATION      SCALE 1-1/2" = 1'

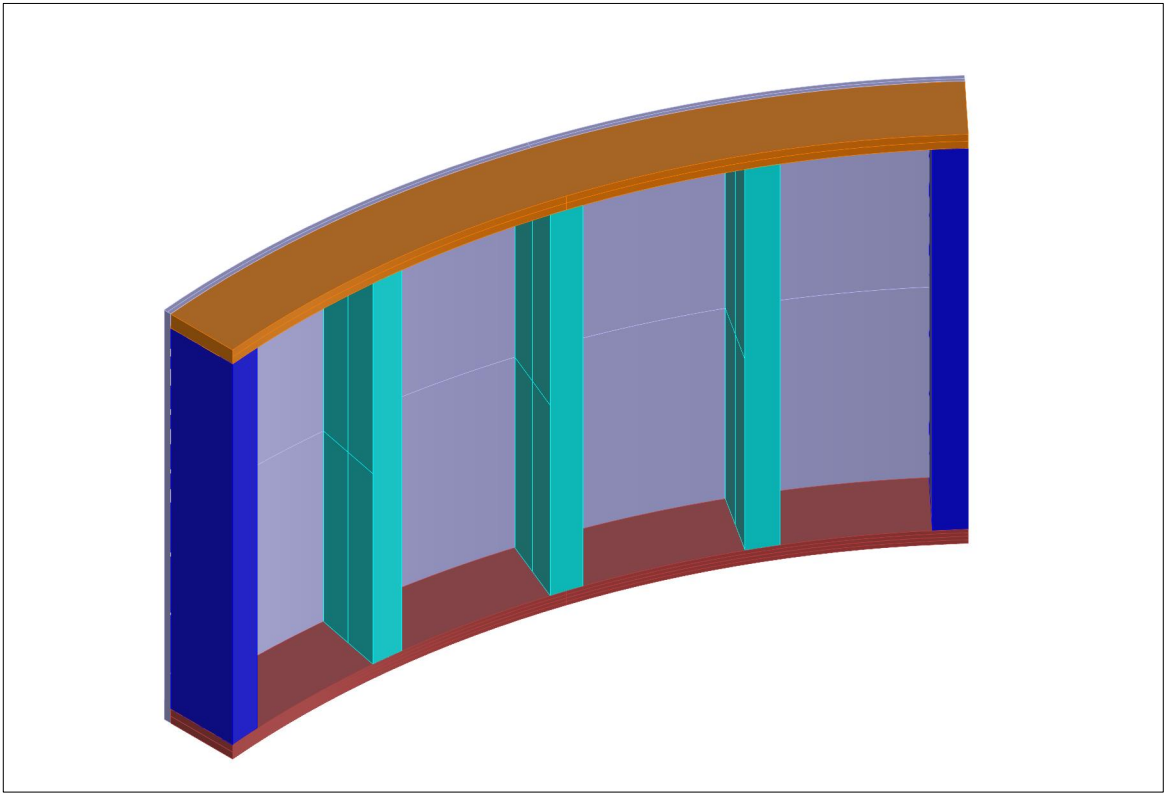

PANEL 8 LAYOUT

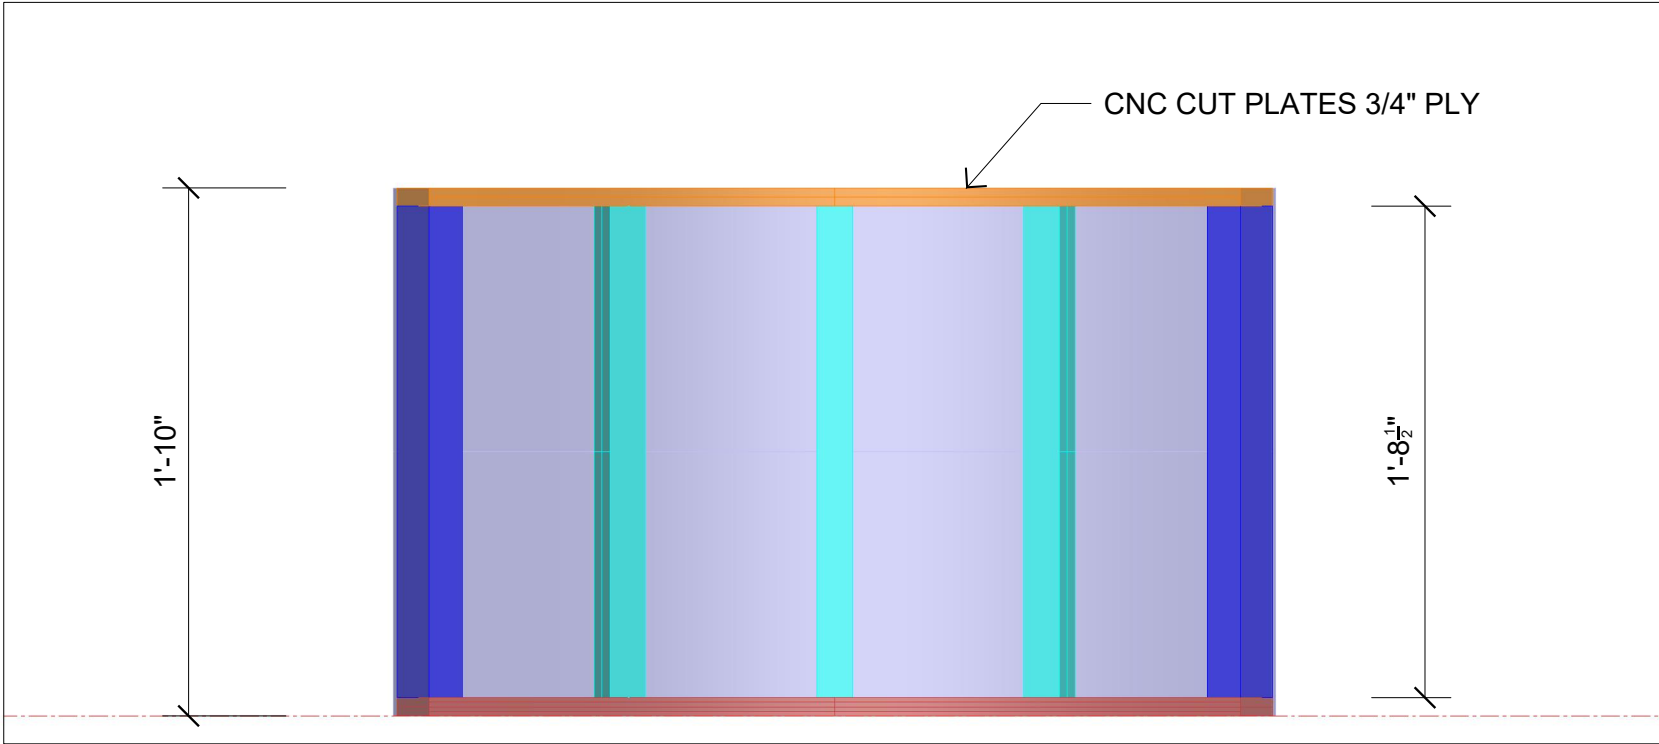

PANEL 8 FRAMING ELEVATION      SCALE 1-1/2" = 1'

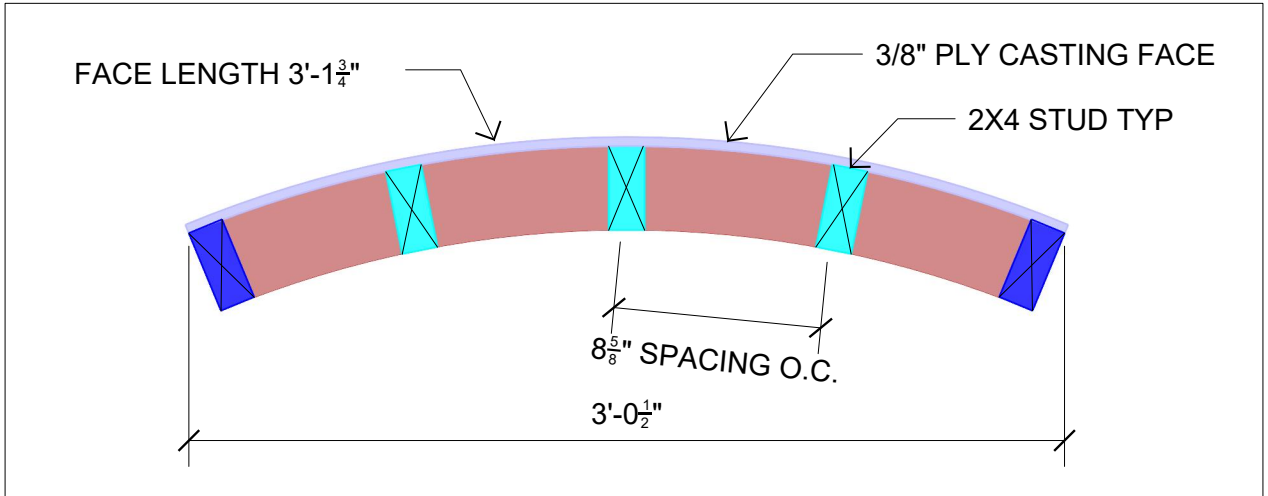

PANEL 8 PLAN      SCALE 1-1/2" = 1'

GENERAL NOTES

1. ATTACH STUDS TO PLATES USING 2 FASTENERS
2. ATTACH CASTING FACE TO FRAMING UTILIZING THREE SCREWS PER STUD, ONE INTO THE UPPER REGION OF THE STUD, ONE IN THE CENTER, AND ONE IN THE LOWER.